FIG. 6

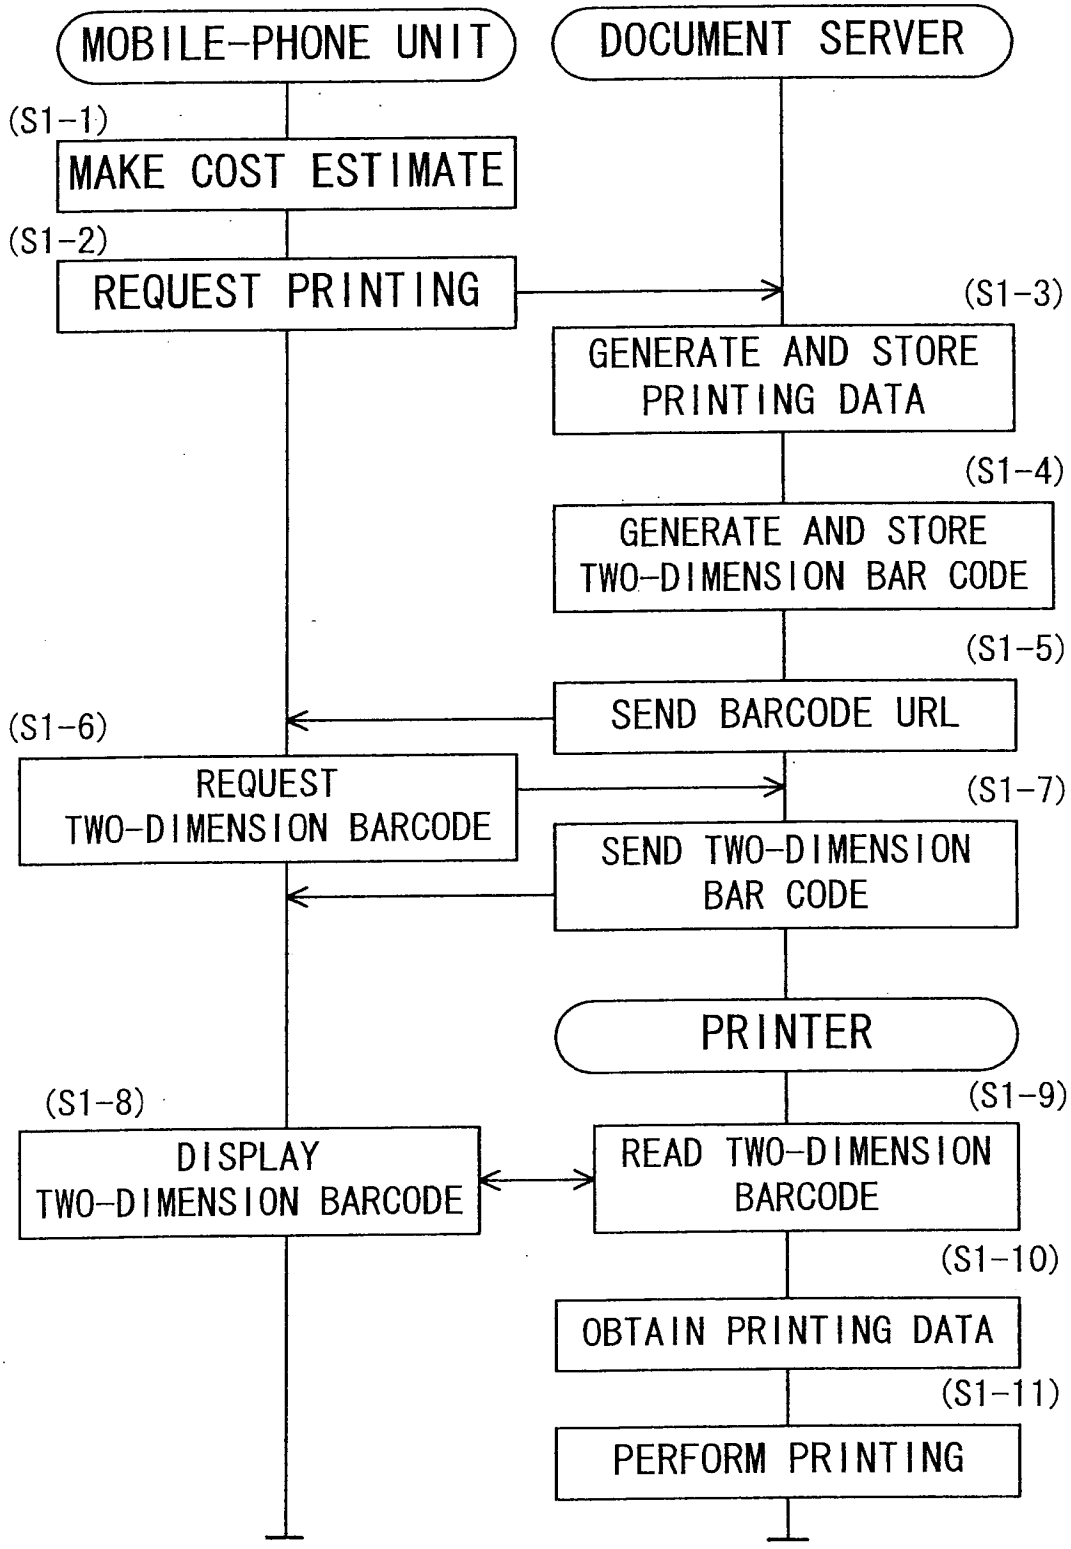
MOBILE-PHONE UNIT
DOCUMENT SERVER
(S1-1)
MAKE COST ESTIMATE
(S1-2)
REQUEST PRINTING
(S1-3)
GENERATE AND STORE PRINTING DATA
(S1-4)
GENERATE AND STORE TWO-DIMENSION BAR CODE
(S1-5)
SEND BARCODE URL
(S1-6)
REQUEST TWO-DIMENSION BARCODE
(S1-7)
SEND TWO-DIMENSION BAR CODE
PRINTER
(S1-8)
DISPLAY TWO-DIMENSION BARCODE
(S1-9)
READ TWO-DIMENSION BARCODE
(S1-10)
OBTAIN PRINTING DATA
(S1-11)
PERFORM PRINTING